

AUVIO™

THE PERFORMANCE YOU NEED

100W 2-Way In-wall Speaker

Please read this user's guide before using your new speaker.

User's Guide

40-290



Package Contents

- | | |
|-------------------|-----------------------|
| ■ In-wall Speaker | Template / Paint Mask |
| ■ User's Guide | Quick Start |

Features

- Mount your speaker flush with the ceiling or wall with the wing-type mounting system.
- The frame and grille can be painted to match the room's decor.
- The tweeter can be tilted to direct the sound to best suit the room's acoustics.

① Installation

Prepare the location

To mount your speaker, you need the following items (not supplied).

- Drywall or keyhole saw
- Wire stripper
- Phillips screwdriver
- Pencil or marker
- 18-20 gauge speaker wire

 
Be sure the mounting surface:

- Is between $\frac{3}{8}$ – $1\frac{1}{8}$ inch thick (9.5 – 32 mm)
- Has at least 3 inches (76 mm) clearance behind the surface
- Has no wall studs or other objects to block the back of the speaker





Warning: *Be careful not to cut into existing wiring or plumbing hidden behind the wall.*

1. Remove the inner cardboard disc from the supplied template/paint mask and keep it for later. Use the outer portion of the mask as a template to mark the cutout hole size and location for mounting the speaker.
2. Use a drywall or keyhole saw to cut the hole.

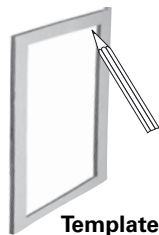


② Connect to your amplifier

  1. Route the speaker wire from your amplifier to the speaker. Avoid routing near existing electrical wires and do not nail or staple the wire.
2. Separate about 4 inches (100 mm) of wire at each end.
3. Using a wire stripper, remove about $\frac{1}{4}$ inch (6 mm) of insulation from each wire. Then twist the ends of each wire.
4. Connect the positive (marked) wire to the red speaker terminal by pressing the tab, inserting the wire into the hole, and releasing the tab. Repeat this procedure to connect the negative (unmarked) wire to the black terminal.
6. Connect the wire coming from the red terminal to your amplifier's positive (+) terminal. Connect the wire from the black terminal to your amplifier's negative (-) terminal.

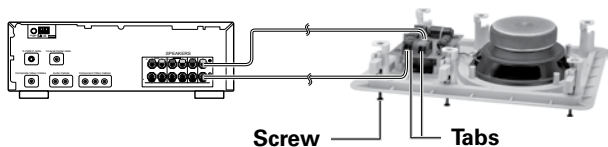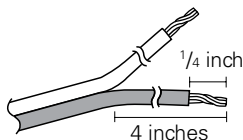

③ Mount the speaker

 1. Remove the grille to expose the mounting screws.
2. Be sure the mounting tabs are turned in, allowing the speaker to fit into the hole. Then insert the speaker into the mounting hole.

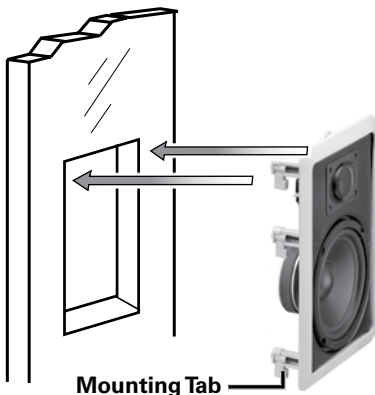

3. Tighten the six screws to secure the mounting tabs to the wall or ceiling. Be careful not to overtighten the screws.
4. Replace the grille.




Note: To remove the speaker from the wall or ceiling, loosen the screws only far enough to remove the speaker. If you loosen the screws too far, you may lose the mounting tabs behind your wall.

Painting the speaker (optional)

Before you connect the speaker wire or mount the speaker, you can paint the frame and grille.

1. To remove the grille, insert a paper clip into one of the grille openings, then pull up.
2. Before you paint the grill, carefully remove the dust cloth.
3. Before you paint the frame, insert the supplied cardboard paint mask to prevent paint from entering the speaker.
4. After the paint is dry, remove the paint mask, replace the dust cloth, and reinstall the grille.



 **Note:** Using spray paint will keep paint from blocking grille holes. Do not paint speaker components.

Specifications

Resonance Frequency	65 Hz \pm 20%
Frequency Response	70–20,000 Hz
Power Handling.....	50W RMS, 100W Max.
Impedance (nominal)	8 ohms
Sensitivity	87 dB \pm 3 dB @ 1W-1M
Tweeter Size	1 in (25 mm)
Woofer Size	6.5 in (165 mm)
Dimensions (HWD).....	12 \times 8.6 \times 2.8 in (305 \times 218 \times 70 mm)

Specifications are subject to change and improvement without notice. Actual product may vary from the images found in this document.

Limited Warranty

Ignition L.P. warrants this product against defects in materials and workmanship under normal use by the original purchaser for **one (1) year** after the date of purchase. IGNITION L.P. MAKES NO OTHER EXPRESS WARRANTIES.

This warranty does not cover: (a) damage or failure caused by or attributable to abuse, misuse, failure to follow instructions, improper installation or maintenance, alteration, accident, Acts of God (such as floods or lightning), or excess voltage or current; (b) improper or incorrectly performed repairs by persons who are not a Ignition L.P. Authorized Service Facility; (c) consumables such as fuses or batteries; (d) ordinary wear and tear or cosmetic damage; (e) transportation, shipping or insurance costs; (f) costs of product removal, installation, set-up service, adjustment or reinstallation; and (g) claims by persons other than the original purchaser.

Should a problem occur that is covered by this warranty, take the product and the sales receipt as proof of purchase date to the place of purchase in the U.S. Ignition L.P. will, at its option, unless otherwise provided by law: (a) repair the product without charge for parts and labor; (b) replace the product with the same or a comparable product; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of Ignition L.P. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

IGNITION L.P. EXPRESSLY DISCLAIMS ALL WARRANTIES AND CONDITIONS NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND, IF APPLICABLE, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, SHALL EXPIRE ON THE EXPIRATION OF THE STATED WARRANTY PERIOD.

EXCEPT AS DESCRIBED ABOVE, IGNITION L.P. SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO THE PURCHASER OF THE PRODUCT OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE AND ANY LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT AND ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF IGNITION L.P. HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some States do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from State to State. You may contact Ignition L.P. at:

Ignition L.P., 3102 Maple Ave, Suite 450, Dallas, TX 75201 02/09

For product support, call **1-866-315-0426**



Protect the environment by recycling used electronics. Go to E-CyclingCentral.com to find an electronic recycling center near you.

Get more from your audio and video equipment. See what you've been missing. With Auvio, **you control the experience.**

Auvio was established by a group of technophiles to provide **high quality audio and video products** without the high sticker price. The Auvio philosophy is for you to experience audio and video as it was intended to be: **pure and distortion free.**

We know electronics can be intimidating. Auvio **simplifies your experience** by providing the right products, with the right specs, to work with your equipment.

Be confident about your purchase: your new Auvio product incorporates the **latest technology**, is built to the **highest quality** standards, and **reduces environmental impact** by complying with RoHS environmental restrictions.

Printed
in China

07A09
40-290